

Fusing unit

Replace fusing unit message


When the following message appears on the LCD, you must replace the fusing unit.

Replace Fuser

WARNING




The fusing unit and the parts around it are *hot!* Be sure to wait until the fusing unit has cooled down sufficiently before replacing the fusing unit. If you touch the hot parts, you might get injured.

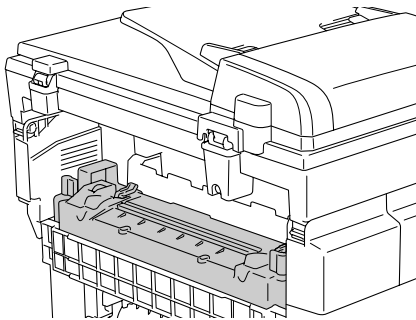


Replacing the fusing unit


- 1 Turn off the machine's power switch. To avoid injury, wait until the machine has cooled down sufficiently before you replace the fusing unit.
- 2 Open the back cover (1) and the scanner unit (2) of the machine.

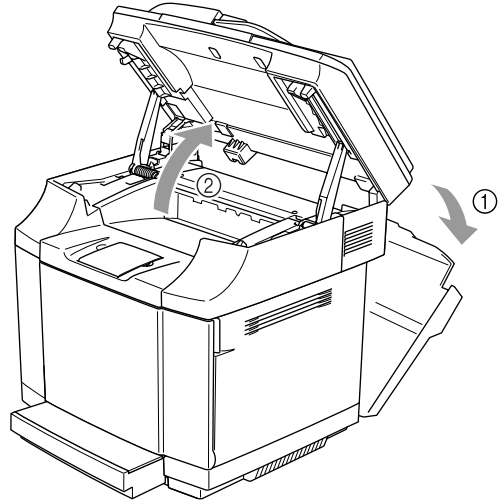


- 3 To release the fusing unit from the machine, release the lock levers that are on both sides of the fusing unit.

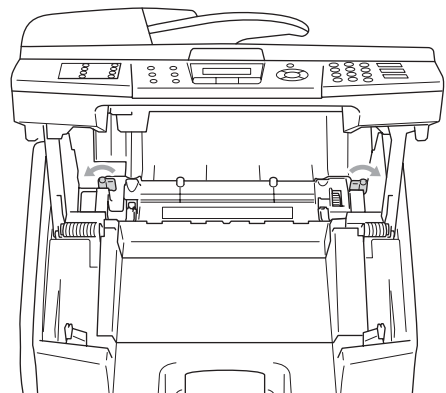


- 4 Hold the handles on both sides as you take the fusing unit out of the machine.

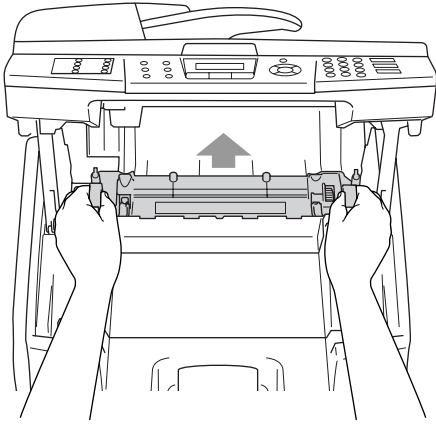


- 6 Secure the fusing unit with the two lock levers that are on both sides of the fusing unit.

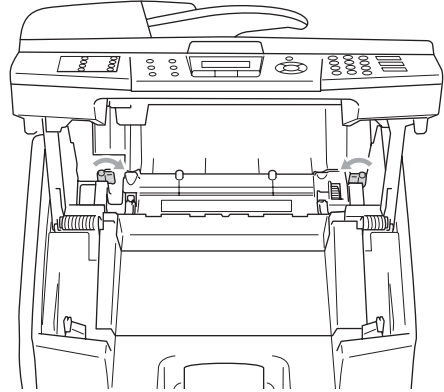

- 5 Put the new fusing unit into the machine. Be sure to insert the fusing unit completely into the machine.

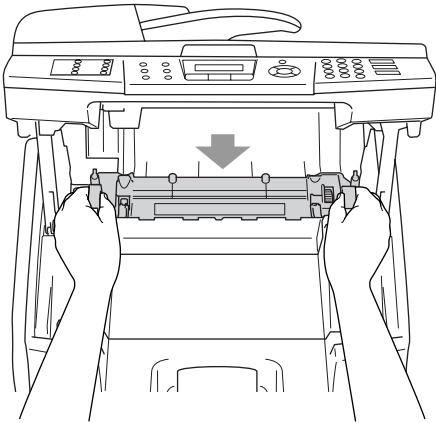

- 7 Move the fusing unit pressure release levers to the Set position.

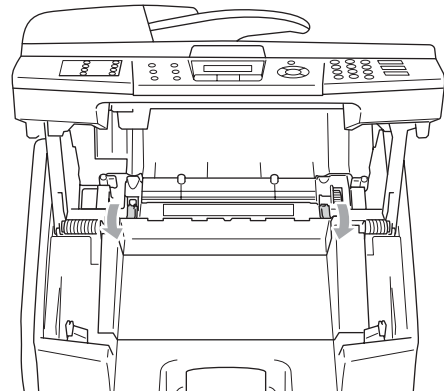

- 8 Close the scanner unit and the back cover.

- 9 Turn the machine's power switch back on.

Reset the Fusing Unit life counter

- 1 Press **Menu/Set**, 7, 4.
- 2 Press **▲** or **▼** to select **Fusing Unit** and press **Menu/Set**.

The confirmation message appears on the LCD.

Fusing Unit
1.Reset 2.Exit

- 3 Press **1** to reset the life counter.
—OR—
Press **2** to cancel.

! CAUTION

Please be careful when replacing the fusing unit. Do not put pressure on the fusing unit; it should go in easily. If it does not, make sure the fusing unit connector is free to move.

Do not apply force! It could damage both the fusing unit and the machine.

Replacing the transfer belt cleaner

! CAUTION

Both ends of the transfer belt cleaner roller consist of metal bearings that connect the bias element to the power supply. These must be connected properly when you install the transfer belt cleaner. Be sure to check how to connect them properly by looking at the old transfer belt cleaner before you begin replacement.

- 1 Turn off the machine's power switch.
- 2 Open the scanner unit.
- 3 Open the inside cover of the machine so that it latches under the scanner unit.

